



adapt[®] 700
made to
measure

Ergochair

Ergochair

your local Ergochair distributor is...

Ergochair Ltd
t: 01454 329210
f: 01454 329266
e: sales@ergochair.co.uk
w: www.ergochair.co.uk

big and
beautiful

Designed specifically to your unique proportions.



adapt[®] 700

... made to
measure

adapt[®] 700

The 'heavy-duty' solution to accommodate the larger user - up to 40 stone (250kg).


The adapt[®] 700 has a 2.5:1 Synchronous Tilt Mechanism, this allows you to adjust the backrest angle and the seat tilt independently of each other.



because people are not made to standard specifications...



...neither are our chairs

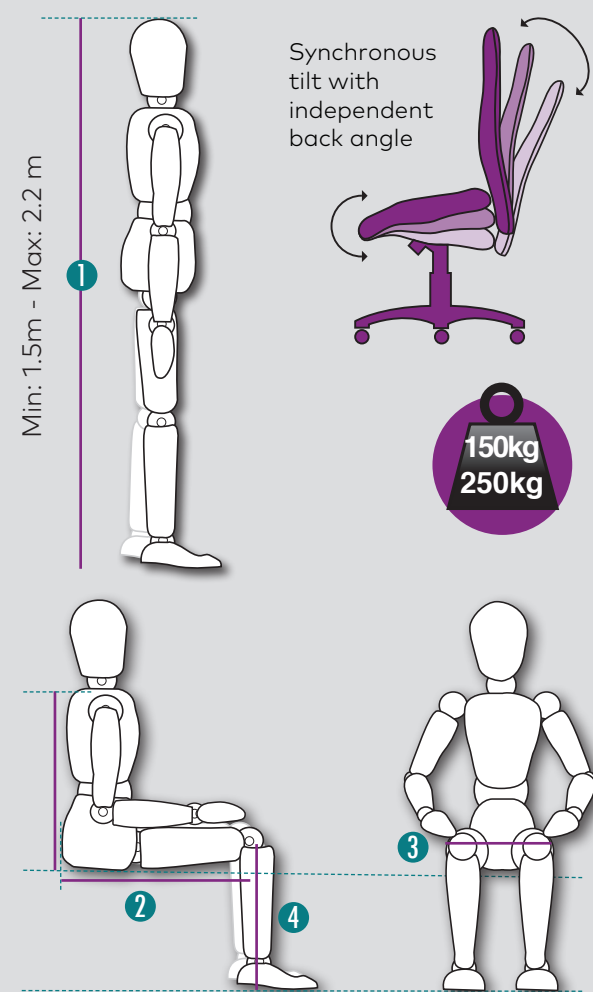

	Min:	Max:
1. Back Height	450mm	660mm
2. Back Width	560mm	560mm
3. Seat Depth	420mm	570mm
4. Seat Width	620mm	620mm
5. Seat Height	510mm	710mm

the adapt[®] 700 is tested to a 250kg / 40 stone weight limit.

700

huge comfort big seating

We are proud to say we are the only company in the UK who will make a chair to fit any person of any size.



Our Adapt[®] ranges are now even simpler to specify, using the easiSpec[®] system.

By taking a few simple measurements our Range Selector will help you choose which Adapt[®] range is best for your needs.



The corresponding easiSpec[®] guide will then take you through the adaptations[™] steps, such as arm and neck supports and air-cell options, to arrive at your ideal chair prescription.



Panelled upholstery is available as an optional extra.

The adapt[®] 700 also features an inflatable lumbar support, multi-layered foam construct seat pad, seat depth adjustment function* and a heavy-duty, polished aluminium base.

* The maximum seat depth featuring a seat slide is 520mm. Seat depths > 520mm - 570mm are fixed.

t: 01454 329210
f: 01454 329266
e: sales@ergochair.co.uk
w: www.ergochair.co.uk